



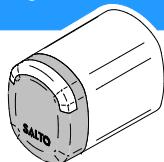


SALTO Neo Europe or UK  
profile half cylinder (Other uses)

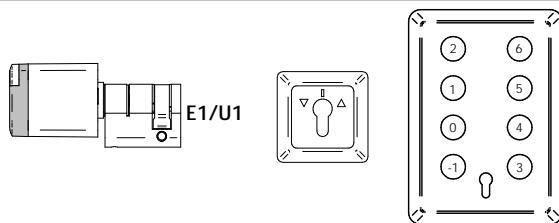

- Eng Installation guide
- D Montageanleitung
- F Guide d'installation
- E Guia de instalación
- NL Installatiehandleiding
- I Guida all'installazione
- P Guia de instalação



Danger for electronic components  
due to electrostatic discharge.

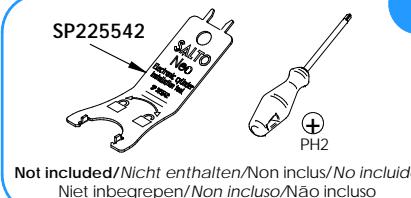

Not included/Nicht enthalten/Non inclus/No incluido  
Niet inbegrepen/Non incluso/Não incluso



For more  
information:



**SALTO Neo**

225840-ED.1- 14/09/2023

All contents current at time of publication. SALTO Systems S.L. reserves the right to change availability of any item in this catalog, its design, construction, and/or materials.


E1/U1

Eng Installation D Montageanleitung F Installation E Instalación NL Montage I Montaggio P Instalação

1






1.1

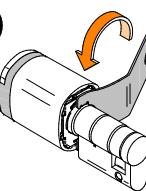


2




1.2

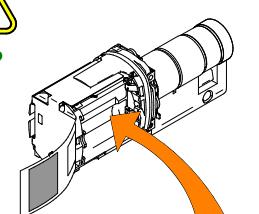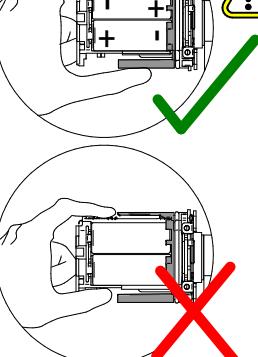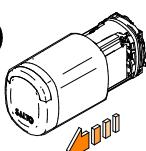


3

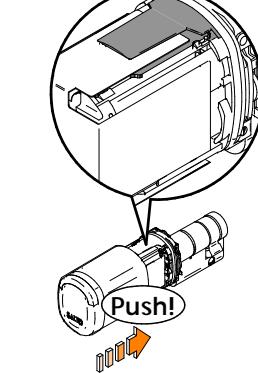

4

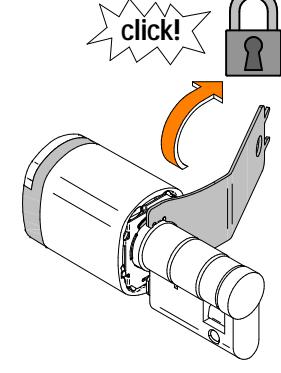


5

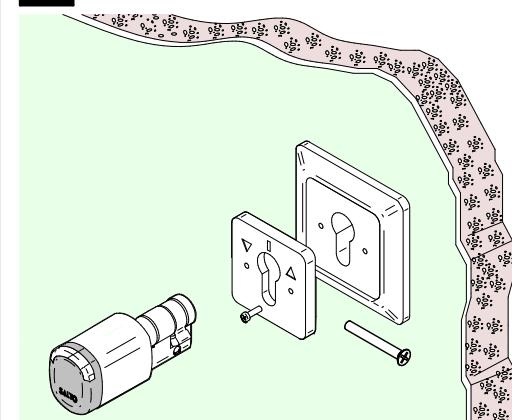

6



Eng Installation and use recommendations D Empfohlene Handhabung und installation F Recommandations d'utilisation et d'instalaltion E Consejos de uso e instalación NL Installatie - en gebruiksinstructies I Raccomandazioni d'uso ed d'utilizzo P Instruções de uso e instalação

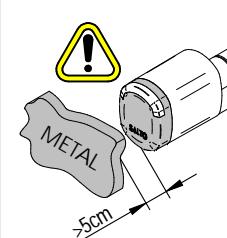

Eng Do not place any movable metallic object closer than 5cm in front of the reader.

D Platzieren Sie keine beweglichen Metallteile näher als 5 cm vor dem Leser.

F Ne placez aucun objet métallique mobile à moins de 5 cm du lecteur.

E No colocar ningún objeto móvil metálico delante del lector a menos de 5cm de distancia.

NL Plaats geen enkel beweegbaar metalen voorwerp dichter dan 5 cm voor de lezer.

I Non posizionare oggetti metallici mobili più vicini di 5 cm al lettore.

P Não coloque nenhum objeto metálico mais próximo do que 5cm na frente do leitor

Eng The knob is uniquely paired to the cylinder, and will not work if you switch in a different SALTO cylinder.

D Der Knauf ist eindeutig mit dem Zylinder gekoppelt und funktioniert nicht, wenn Sie einen anderen SALTO-Zylinder verwenden.

F Le bouton du lecteur SALTO est appairer au cylindre. Le cylindre ne fonctionnera pas si vous l'inverser avec un autre cylindre SALTO.

E El pomo está emparejado únicamente al cilindro, no funcionará si lo conecta a otro cilindro SALTO diferente.

NL De knop is uniek gekoppeld aan de cilinder en zal niet werken als u de knop op een andere SALTO cilinder plaatst.

I Il pomolo è accoppiato univocamente con il corpo del cilindro, non funzionerà il dispositivo se si cambia con un altro cilindro.

P O botão está emparelhado ao cilindro correspondente e não funcionará se trocar por um cilindro SALTO diferente.



Paired!