

Salto Neo - Mortise Cylinder

The Salto Neo mortise cylinder is specially designed to fit most doors that are equipped with a mortise lock that need a mortise cylinder.




Features

- Salto SVN and BLUEnet Wireless network capable.
- All communication between the carrier and the electronic cylinder is encrypted and secured.
- The batteries can be replaced without cylinder removal.
- Optical signalling through light ring. Dual colour green/ red to indicate access authorisation. Acoustic signal optional.
- Equipped with anti-drilling protection.
- Optional torx screw to tighten the knob and convert the cylinder on a fixed knob cylinder.
- Emergency opening via portable programming device (PPD).

Technical characteristics

- Available from 32mm (1-1/4") to 50mm (2") mortise lengths.
- Standard and Adams Rite cams included.
- Compatible with most market standard cams (Medeco®, Yale®, Marks®, Ilco®)
- Optional ring available for better fitting.
- Tool accessory for an accurate installation.

Technical drawing

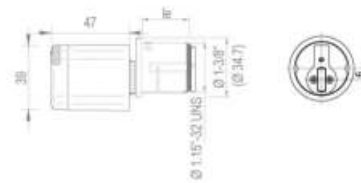

Finish



Technology platforms



Salto Space



On-premise Network



Salto KS



Cloud application



Salto Homelok




Cloud application

Wireless technologies



Certifications

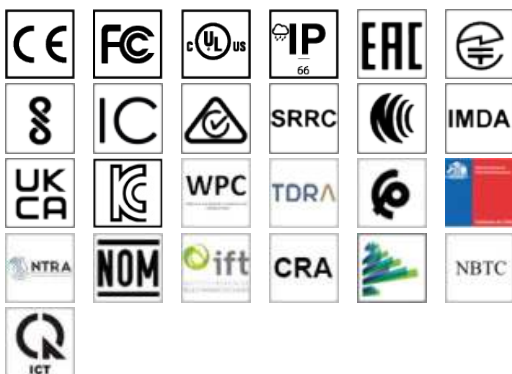

Carriers



Key Card

NXP MIFARE®



Key Fob

NXP MIFARE®



Digital Key

Bluetooth LE

NFC - Near Field Communication



Apple Wallet

Room keys in Apple Wallet

Disclaimer:

For a complete description of the product range, verification of the availability and technical feasibility of the selected product, and a commercial offer, please get in touch with the local authorized Salto dealer or a Salto office.

Salto reserves the right to modify the product and its components.

Technical information and images displayed on the Salto product page are for informative purposes only and designed to inform about the main product features, options and technical specifications. Therefore, all images, illustrations, shapes, features, specifications, sizes, data, descriptions and colours shown on the Salto Systems page shall consider as no-binding approximate indications only.

Part of the content of this document may have been generated or assisted by artificial intelligence tools. This document may also include automatic or manual translations provided exclusively for informational purposes, which may contain errors or inaccuracies. Salto does not guarantee the accuracy, quality, or reliability of such content or translations, including those generated by AI.

The User is responsible for verifying the information contained in this document and, in case of doubt, must refer to the original English version, which shall prevail in the event of any discrepancy. Other language versions are provided for informational purposes only.

Although Salto makes reasonable efforts to review the content of its downloadable documents, they may contain errors or omissions. Salto assumes no liability arising from the User's use, interpretation, or decisions made based on the information contained in this document, which is used at the User's sole responsibility.

For more detailed information on the use of artificial intelligence, translations, and applicable limitations of liability, please refer to the ["Terms of Use of our Website"](#).